

CHARGE CONTROLLER

SIMPLIFIED UPDATE GUIDE



This simplified guide outlines the essential steps required to update the BEQ charge controller quickly and safely. It was designed to assist installers throughout the configuration process.

STEPS:

1. To connect to the charge controller, locate the network that starts with **BEQ_CC_** (followed by the serial number). If a password is required, use **BEQ_Config**.
2. Open a web browser and enter the following address: **192.168.4.1**
3. Enter the following login information:

User ID : Advanced

Password : BEQ_Config

Charge Controller Login

User ID

Password

Login

1. Select Update

BEQ Technology Charge Controller

Basic User
Advanced User
Network Configurations
Update
Check Update

Choose your units to pair with this Controller:
 R4800000A000045
 Erase List
CC: no other CC found

Installation Option: Override Only Using Dry Contact Dry Contact Breaker Capacity: 0 Amp Dry Contact Status: 0

Main Breaker Capacity: 200 Amp Max % of Capacity: 80 %
Main Breaker Capacity of Zero(0) de-activate Power Sharing!

Down Link Address: 111 Clamp Type: 200A 400A 1000A

Mode: MonoPhase TriPhase Unit Error: No Error
Linked to: R4800000A000045(0A, S:1, s:0, p:3)

Up Link Address: Mode: Charge Controller Repeater

Save and Restart

Select the file provided to you by a BEQ technician, then click **Update**.

1. Allow approximately 3 minutes for the controller to restart.
2. Reconnect to the charge controller's Wi-Fi network.
3. Open a web browser and enter the following address: **192.168.4.1/install**
4. Check the **FACTORY RESET UNIT** option.

Factory Reset Unit

Factory Reset

Save

6. Press SAVE